


## INSTRUCTION MANUAL MANUAL/ MOTORIZED TROLLEY

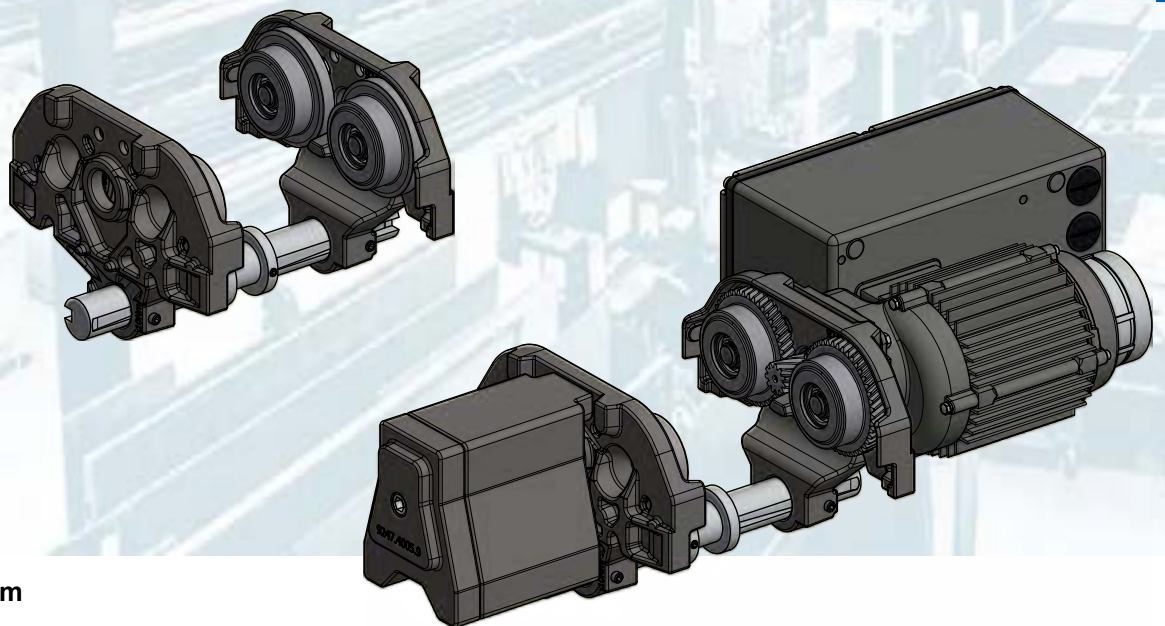

[www.Spanco.com](http://www.Spanco.com)

## Table of contents

Spare parts / Ordering spare parts .....	3
<b>0 General information .....</b>	<b>4</b>
0.1 General safety instructions .....	4
0.1.1 Safety and hazard information .....	4
0.2 General safety regulations and organizational measures .....	4
0.2.1 Warning markings / Legends / Warning signs .....	4
0.3 Particular safety instructions .....	4
0.4 Instructions for hazard protection .....	5
0.4.1 Hazards - Mechanical .....	5
0.4.2 Hazards - Electrical .....	6
0.4.3 Sound pressure level .....	6
0.5 Periodic checks .....	7
0.5.1 Warranty .....	7
0.6 Appropriate use .....	7
0.6.1 Use of the instruction manual .....	8
<b>1 Description .....</b>	<b>8</b>
1.1 Operating conditions .....	9
1.2 General description .....	10
1.3 Emergency stop .....	11
<b>2 Start-up .....</b>	<b>11</b>
2.1 Transport and assembly .....	11
2.2 Twist lock installation .....	11
2.3 Push trolley .....	12
2.4 Motorized trolley .....	13
2.4.1 Electrical connection .....	14
<b>3 Care and maintenance .....</b>	<b>15</b>
3.1 General guidelines for maintenance and repair .....	15
3.2 Care and maintenance .....	16
3.2.1 Care overview .....	16
3.2.2 Maintenance overview .....	16
3.2.3 Brake system .....	16
3.2.4 Transmission .....	17
3.2.5 Tightening torques .....	17
3.2.6 Load wheels .....	17
<b>4 Measures for achieving safe operating periods .....</b>	<b>18</b>
4.1 Determining the actual use .....	18
4.2 General overhaul .....	19
4.3 Disposal .....	19
<b>5 Annex .....</b>	<b>20</b>
5.1 Technical data (Metric) .....	20
5.1 Technical data (Imperial) .....	22
5.2 Electrical parameters .....	24
5.5 Warranty .....	25

## Spare parts / Ordering spare parts

The correct order numbers for original spare parts can be obtained from the relevant spare parts list. Please ensure that you have the following data on your trolley to hand. This will enable the correct spare parts to be supplied without delay.

Trolley type: \_\_\_\_\_

Serial number: \_\_\_\_\_

Year of manufacture: \_\_\_\_\_

Load capacity: \_\_\_\_\_

Original spare parts for the trolleys can be acquired from the following addresses:

PTP Spanco, Inc.  
604 Hemlock Rd  
Morgantown, PA 19543  
800-869-2080  
www.spanco.com

**Resellers/Agent** \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

## 0 General information

### 0.1 General safety instructions

#### 0.1.1 Safety and hazard information

The following symbols and terms are used in this instruction manual for safety and hazard instructions:



**WARNING !**

Non-compliance, either in part or full, with operating instructions with this symbol can result in serious personal injury or fatal accidents. Warning information must be **strictly** adhered to.



**CAUTION !**

Non-compliance, either in part or full, with operating instructions with this symbol can result in major damage to machinery, property or material. Information in the "Caution" category is to be **exactly** adhered to.



**NOTE**

Following the instructions marked with this symbol will lead to more effective and straightforward operation. "Note" directions make work easier.

### 0.2 General safety regulations and organizational measures

The instruction manual must always be available within the operating area of the trolley. The information on the trolley's type and data plate must be checked against tables 5-1 to 5-7, (p.g 22-23) and the corresponding dimensioned drawing. The dimensioned drawing also shows the dimensions of the trolley. This ensures that this instruction manual can be clearly assigned to the trolley. The instruction manual must be strictly adhered to. Furthermore, supplementary to the instruction manual, the statutory regulations governing general accident prevention and environmental protection are to be enforced.

Operating and service personnel must have read and understood the instruction manual, in particular the safety instructions, before commencing work. Protective equipment must be made available for operating and service personnel and worn at all times. The operator or their representative is responsible for supervising operating personnel and ensuring they are aware of the hazards and safety implications of working with the trolley.

The manufacturer reserves the right to make technical changes to the product or changes to these instructions and assumes no liability for the completeness and up-to-dateness of these instructions. The original version of these instructions is in the German language. In case of doubt, the original German original version is exclusively valid as a reference document.

#### 0.2.1 Warning markings / Legends / Warning signs

- Box Label.....Figure 0-1
- Data plate .....Figure 0-2
- Voltage..... Figure 0-3

Figure 0-1

Figure 0-2

Figure 0-3



### 0.3 Particular safety instructions

**Transport / Assembly:**

- Trolleys, single parts and large components should be carefully fixed to suitable and technically acceptable hoists/load handling devices.

**Connection:**

- Connection work is only to be performed by personnel specifically designated and trained for the job.

**Start-up / Operation:**

- Before initial start-up, as well as daily start-up, carry out a visual check and the stipulated user-checks routine.
  - Only operate the trolley if the protective and safety equipment provided is ready and working.
  - Damage to the trolley and changes in its operational characteristics must be reported immediately to the responsible person.
  - After use, or when in a non-operational mode, the trolley should be secured against recognized and unintentional use.
  - Refrain from hazardous procedures.
- See also operational parameters (Chapter 0.6).

**Cleaning / Service / Repair / Maintenance / Refitting:**

- Use working platforms provided for installation work at high level.
- Do not use machine parts for this purpose.
- Check electrical cables for damage or wear.
- Ensure any oils or other agents used are collected and disposed of safely and in an environmentally sound manner.
- Reassemble and check safety devices that have been disassembled for maintenance or repair of the hoist once service and repair work has been completed.
- Adhere to predefined testing and service intervals specified in the instruction manual.
- Follow the directions in the instruction manual regarding exchanging parts.
- Operating personnel should be informed before commencing special or repair work.
- Secure the repair working area.
- Prevent the trolley from being unexpectedly switched on during maintenance or repair work.
- Attach warning signs.
- Disconnect the power cable and ensure it cannot be switched on again by unauthorized personnel.
- Retighten screw connections that have been loosened for repair or maintenance work.
- Replace non-reusable fixing elements and sealings (e.g. self-locking nuts, washers, cotter pins, O-rings and seals).

**Shut down / Storage:**

- Clean and preserve (lubricate/grease) the trolley before long periods of inactivity or storage.

### 0.4 Instructions for hazard protection

Hazardous areas must be clearly marked by warning signs and cordoned off. It must be ensured that warnings regarding hazardous areas are given due attention.

**Hazards can stem from:**

- incorrect application
- not following safety directions properly
- not carrying out test and service work thoroughly

#### 0.4.1 Hazards - Mechanical



**Physical injury:**

**Unconsciousness and injury through:**

- crushing, shearing, cutting, and twisting
- drawing in, ramming, piercing, and rubbing
- slipping, stumbling, and falling

**Causes:**

- crushing, shearing, and twisting
- parts rupturing or bursting

**Safety options:**

- keep floor, equipment, and machinery clean
- eliminate leakages
- observe the required safety distance

**0.4.2 Hazards - Electrical**

Work on electrical apparatus or machinery may only be performed by qualified electricians or persons under the supervision and guidance of qualified electricians, in accordance with electrical regulations.



**Physical injury:**

**Death from electrical shock, injury and burns through:**

- Contact
- Faulty insulation
- Faulty maintenance or repair work
- Short circuit

**Causes:**

- Contact with, touching, or standing too close to uninsulated power and live parts
- Use of uninsulated tools
- Exposed electricity supply terminals following insulation failure
- Inadequate safety checks following repair work
- Incorrect fusing

**Safety options:**

- Isolate machinery and equipment designated for repair or maintenance work before commencing such work.
- First check isolated parts for voltage.
- Regularly check electrical fittings.
- Replace loose or damaged cables immediately.
- Always replace blown fuses with fuses of the correct type/value.
- Avoid contact with or touching live terminals.
- Only use insulated tools.

**0.4.3 Sound pressure level**

Tests on the motorized trolley sound level are performed at a range of 1, 2, 4, 8 and 16 m (3, 7, 13, 26, and 52 ft) from the center of the trolley motor to the measuring device.

The SPL was measured:

- During operation of motorized trolleys on factory site.
- During open-air operation of motorized trolleys.

Table 0-1 Sound level

Measuring distance		1 m (3 ft)	2 m (7 ft)	4 m (13 ft)	8 m (26 ft)	16 m (52 ft)
Series	Measurement type	dBA				
GMF 1250/2500, GMF 1250/2500 1Ph	a	75	72	69	66	63
	b	75	69	63	57	51
GMF 4000/5000/6300	a	75	72	69	66	63
	b	75	69	63	57	51



When working in a noisy environment, the use of ear protection is recommended.

**0.5 Periodic checks**

Each hoist/trolley user should adequately note all checks, maintenance, and inspections performed in the inspection report, and have these confirmed by the competent person in charge. Incorrect or missing entries will lead to forfeiture of the manufacturer's warranty.



Devices and cranes are to be checked periodically by a specialist. Primarily, visual and functional checks are to be carried out, whereby the state of components with respect to damage, wear, corrosion, or any other changes is determined. In addition, safety equipment is assessed for completeness and efficiency. It may be necessary to dismantle the equipment to correctly assess wear parts.



Load-bearing parts must be inspected over their entire length, including covered or hidden parts.



All periodical inspections should be arranged by the operator.

**0.5.1 Warranty**

The warranty is void if the installation, operation, testing, and maintenance is not carried in accordance with this instruction manual. Repairs and troubleshooting under warranty may only be carried out by qualified persons after consultation and agreement with the manufacturer / supplier. Any modifications to the product or the use of non-original spare parts will void the warranty.

**0.6 Appropriate use**

The trolleys of the GHF and GMF series are trolleys for various lifting capacities. The trolleys are manufactured in accordance with the latest technical developments and recognized safety standards, and are tested for safe operation by the manufacturer. Trolleys are approved by various international classification societies. Trolleys of the above series may only be used when in an acceptable technical condition, in accordance with their intended use, by trained personnel in a safe and responsible manner.

**General operating conditions:**


- Ambient temperature ..... : -15 °C to +50 °C (5 °F to 122 °F)
- Humidity ..... : max. 80% relative humidity
- Protection class ..... : IP 54
- Electromagnetic compatibility ..... : Immunity, industrial area



We recommend equipping trolleys used outdoors with a canopy to protect them from the weather or to move the chain hoist, trolley and travel drive under a canopy when not in use. Special operating conditions can be agreed in individual cases with the manufacturer. After consultation, appropriate, optimized equipment, and important information for safe, low-wear use can be supplied. The intended use of the trolleys likewise assumes the adherence to the operating, maintenance and servicing prescribed by the manufacturer.

**Improper use comprises:**

- exceeding the defined maximum permissible load capacity
- pulling the load diagonally (maximum angle 4°, see Figure 0-5)
- heaving, pulling, or dragging the load
- transporting persons
- moving loads over persons
- standing under suspended loads (see Figure 0-6)
- transporting excessive loads
- pulling on the control cable
- failing to observe the load constantly
- use in an explosive environment

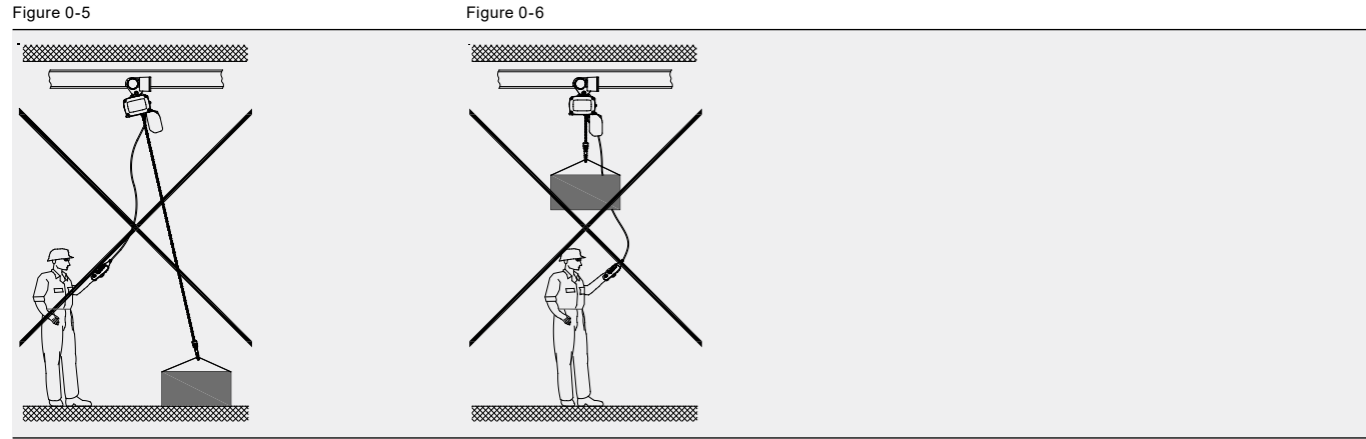Refer also to Chapter 0.3.



-  Excessive inching operations and driving against the limit stops should be avoided. The loads shall be lifted off the ground with the lowest available lifting speed. If these instructions are not followed, the manufacturer accepts no liability for damage to equipment and third parties caused by such actions.
-  With pole-changeable motors the low speed is only suitable for driving and braking. In short time operation max. 20% of the fast gear duty cycle.

**0.6.1 Use of the instruction manual**

This instruction manual includes the following chapters:

- 0 General information
- 1 Description
- 2 Start-up
- 3 Care and maintenance
- 4 Measures for achieving safe operating periods
- 5 Appendix

Supplementary to the instruction manual, the following documentation from the operator must be noted:



- Declaration of conformity
- Inspection report
- Spare parts list(s)
- Circuit diagrams

**Page and figure numbering:**

The pages are consecutively numbered. Blank pages are not numbered, however are calculated together with the consecutive pages. Figures are numbered consecutively by chapter. Example: Figure 3-1 means: in Chapter 3, Figure 1.





# 1 Description

The series includes the following models: GHF, GMF.

-  The trolley must have at least the same lifting capacity as the chain hoist.
-  The classification of the trolley can be found on the data plate.

The manufacturer will only guarantee the safety and lasting operation of the trolley when used for applications in accordance with valid standard values that fall within its classification. Before the initial start-up, the user must estimate according to the parameters in Table 1-1, which of the four types of load is applicable to the use of the trolley during its whole life cycle. Table 1-2 shows standard values for the operating conditions of the classifications depending on the type of load and number of cycles.

Table 1-1 Load spectrums

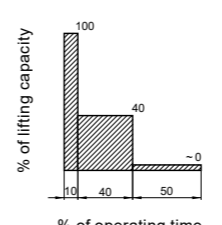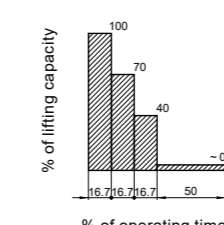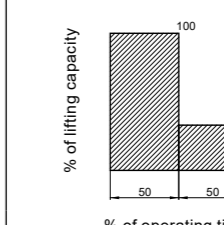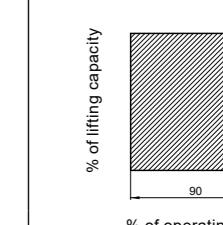Load type Q2 light Q < 0.50 Q = 0.50	Load type Q3 medium 0.50 < Q < 0.63 Q = 0.63	Load type Q4 heavy 0.63 < Q < 0.80 Q = 0.80	Load type Q5 very heavy 0.80 < Q < 1.00 Q = 1.00
			
Full load only by way of an exception, however predominantly low loads	Often fully loaded, however continuously lightly loaded	Frequently fully loaded, continuous average loading	Regular full loading


Q = Load spectrum (type of load)

Table 1-2 Operating conditions

	(M3/H2)	(M4/H3)	(M5/H4)	(M6/H4)
Load spectrum	Number of cycles per working day (travel classes Dt2 - Dt5, travelling speed 12 m/min) (39 ft/min)			
Q2 - light Q < 0.50	120	240	480	960
Q3 - medium 0.50 < Q < 0.63	60	120	240	480
Q4 - heavy 0.63 < Q < 0.80	30	60	120	240
Q5 - very heavy 0.80 < Q < 1.00	15	30	60	120

**Ascertaining the correct type of application for a trolley:**

Either the number of cycles or expected type of load can be used as a basis for ascertaining the correct type of application for the trolleys.

-  Before initial start-up of the trolley, it is necessary to ascertain which of the load types in Table 1-1 applies to the operation of the trolley. Assignment to a load type or a load spectrum (Q) applies for the whole service life of the equipment and may not be altered for operational safety reasons.

**Example 1: Calculate permissible operating time of the trolley**

A trolley of the classification H3 is to be used for medium stress load tasks throughout its whole calculated service life. This corresponds to the type of load <Q4 heavy> (see Table 1-1). Corresponding to the values in Table 1-2, the trolley should not be used for more than 60 cycles per day.

**Example 2: Calculate the permissible type of load**

A trolley of the classification H4 is to be used for approximately 400 cycles per working day, throughout its whole service life. Thus, the trolley must be operated in accordance with the characteristics of the type of load <Q2 light> (see Table 1-1).

**1.2 General description**

Figure 1-1 GHF 1250/2500 and GMF 1250/2500


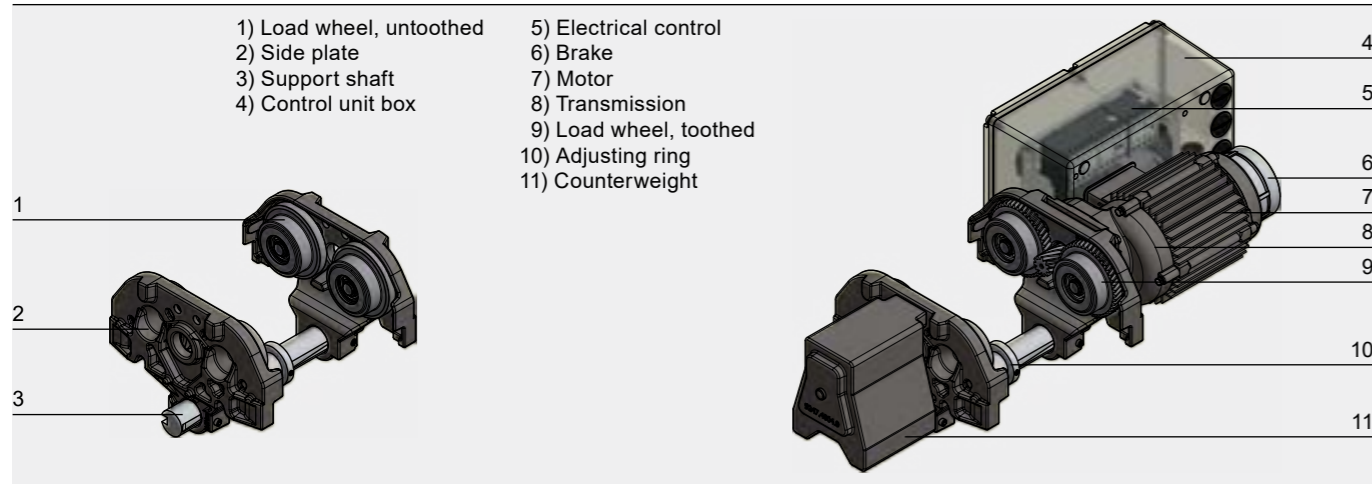


Figure 1-2 GHF 5000/6300 and GMF 4000/5000/6300

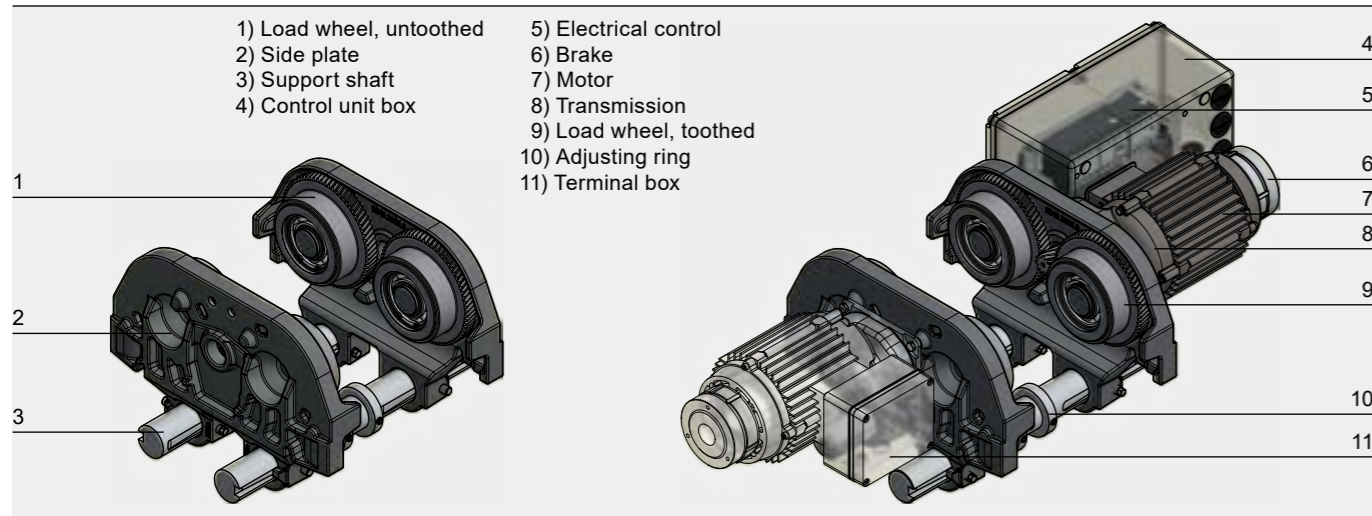

The side plate is made of robust grey cast iron and is equipped with a fall arrester. Depending on the series, one (Figure 1-1) or two support shafts (Figure 1-2) are required for assembly. The support shaft is made of special steel. The flange width can be adjusted to suit individual requirements (see Table 5-8). Two adjusting rings in the middle fix the chain hoist. The original version of the load wheels is suitable for flat flanged brackets (Figure 1-3), made of grey cast iron and fitted with ball bearings. On the push trolley (GHF), the four load wheels are not toothed, while on the motorized trolley (GMF) the driven load wheels are toothed.

The drive (GAT) of the motorized trolleys consists of an asynchronous motor and a transmission. The GMF 1250, GMF 2500 (Figure 1-1) and GMF 4000 (Figure 1-2) motorized trolleys are equipped with one drive unit and the GMF 5000 and GMF 6300 motorized trolleys have a drive unit on both sides (Figure 1-2). Two-speed models include a pole-changeable version of the motor. The motors comply with the legal requirements for trolleys. The winding corresponds to insulation class F. The drives are generally equipped with a brake. The spur gear (N/S) reduces the speed of the motor to the load wheel.

The motorized trolleys are equipped with a 42 V contactor control as standard. The generally built-in emergency stop contactor disconnects all three main phases from the mains when the red button is pressed. The standard equipment of the motorized trolley includes a control switch (up/down and forward/back with emergency stop). The forced disconnecting emergency stop contact of the control switch immediately opens the circuit for supplying the contactors.

The counterweight is required for a motorized trolley to balance the mass of the drive motor and the control. To prevent tipping, an additional weight is added for small flange widths.

**Options:**

- Load wheels for conical brackets (spherical load wheels, Figure 1-4)
- Support rollers for use on single-rail tracks with bends (Figure 1-5)
- Trolleys in corrosion-resistant design (GHFR/GMFR) with plastic or steel load wheels
- Motorized trolleys with protection class IP 65
- Motorized trolleys with food grade grease
- Motorized trolleys in dustproof or gasproof design (ATEX)
- Motorized trolleys with frequency control (FU)
- Motorized trolleys with radio remote control (Figure 1-6)
- Motorized trolleys with limit switch (Figure 1-7)
- Push trolley GHF 1250 with parking brake


Figure 1-3

Figure 1-4

Figure 1-5

Figure 1-6

Figure 1-7

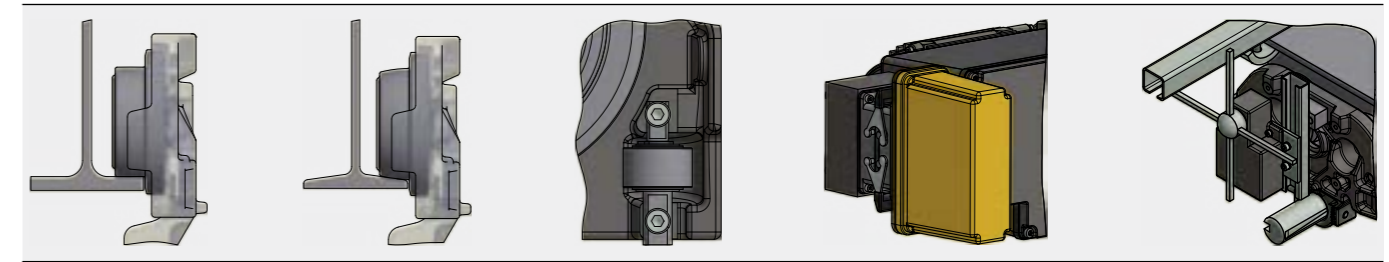

**1.3 Emergency stop**

By pressing the emergency stop button, the power supply to the trolley is interrupted in all phases. The movement of the trolley is stopped immediately. To unlock the emergency stop button, it must be turned in the indicated direction.



After an emergency stop, the operator may only restart the trolley after a competent person is satisfied that the cause which led to the emergency stop has been eliminated and that there is no longer any danger from further operation of the system.

**2 Start-up**



Mechanical adjustments may be performed by authorized specialists. If no tightening torques are specified for screw connections, the general information in Chapter 3.2.5 applies.



Operating staff must carefully read the instruction manual of the trolley before initial start-up and carry out all the checks. The device shall be put back into operation only after operational safety has been established. Unauthorized persons may neither operate the device nor carry out work with it.



The operator must create an inspection report during the start-up of the trolley. The inspection report contains all the technical data and the date of start-up. It provides a record of all servicing and maintenance work.

**2.1 Transport and assembly**

The safety directions for handling with loads should be followed (see Chapter 0.3) when transporting and assembling the trolley. Trolleys must be assembled by qualified staff, always bearing in mind the accident prevention directions (see Chapter 0.2). Before assembly, the trolley must be stored in a closed room or covered area. Should the trolley be destined for operation outdoors, then it is recommended that a protective cover is erected to shield it from the effects of the weather.

Wherever possible, the trolley should be transported in its original packaging. The goods delivered should be checked for completeness and the packaging disposed in an environmentally sound manner. It is recommended that the trolley is assembled and connected on-site by skilled personnel.

**2.2 Twist lock installation**

- Cut a section of power wire that can reach from your hoist in any position on your crane to a power outlet. This installation will be completed on the end that was cut. Do not plug the wire in to the wall outlet until the full twist lock installation is complete.
- Using a razor blade or cutting tool, slit the outermost layer of insulation 3" (Figure 2.2-1) away from the end of your cable. Only cut one side of the insulation. The slice should be in between the middle two wires. Do not slit any of the insulation around the individual wires while doing this.
- Fold the flat set of wires in half to make a square. Fold the slit insulation away from the end of your wiring and tape down the folded insulation with electrical tape 2-1/4" from the end (Figure 2.2-2).
- Take your wire strippers and strip the insulation 5/8" (Figure 2.2-1) from the end of each of the four wires. Then twist each of the newly exposed copper wires separately either clockwise or counterclockwise to tighten the copper wires.

Figure 2.2-1


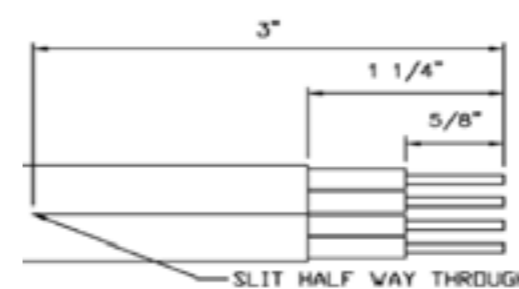


Figure 2.2-2

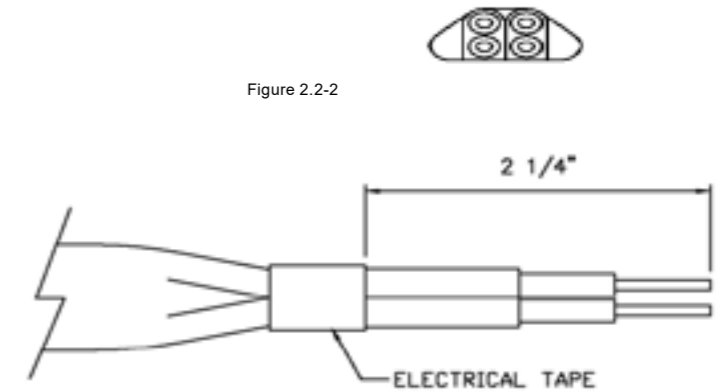

- Insert the newly exposed wiring through the two black plastic housings making sure that you put the wiring through the ridged outer shell first.
- On the plug head there will be four screws facing out, one of which will be green. Use the Phillips head screwdriver to unscrew each of these a few rotations, this will loosen a small metal plate that each screw is holding pressed against another metal plate.

Figure 2.2-3



Figure 2.2-4



- Insert the green wire into the newly opened space between two small metal plates that were held down by the green screw. Once the 5/8" of copper wire is inserted between the plates, tighten down the green screw to hold the wire in place.
- Repeat this process until all three other wires have been secured. No other wire color needs to go to a specific screw.
- When each of the wires have been fastened, bring the two black plastic housings towards the plug and line up the long screws into the black housings.
- Tighten the long screws on the face of the plug.

Figure 2.2-5



Figure 2.2-6



### 2.3 Push trolley

#### Checking the lifting capacity:

The lifting capacity of the trolley must be at least equal to the lifting capacity of the electric chain hoist.

#### Checking the flange width:

The flange width of the bracket must be within the adjustment range of the support shaft supplied (see Table 5-8).

#### Installation of the trolley (see Figure 2.3-1):

The two side plates (1) are pushed onto the support shaft with the adjusting rings (2) and fixed with the grub screws (3). These must be tightened to the following torque: GHF 1250 = 10 Nm (7 ft/lbs), GHF 2500 = 22 Nm (16ft/lbs), GHF 5000 = 18 Nm (13 ft/lbs), GHF 6300 = 24 Nm (18 ft/lbs). When doing so, it must be ensured that the excess length of the support shaft is evenly distributed on both sides. For the installation of a chain hoist it may be necessary to remove an adjustment ring.

⚠ The running clearance between the load wheel and the bracket must be 1.5 mm (.06 in) each (see Figure 2.3-2).

⚠ The grub screws for fixing the support shaft to the side plate are provided with a captive screw lock. The keyways in the support shaft must be aligned exactly with the grub screws. The grub screws cannot be reused (see Figure 2.3-3).

⚠ The grub screws for fixing the adjusting rings on the support shaft are provided with a captive screw lock. The grub screws must be aligned exactly with the holes in the support shaft (GHF 1250/2500 see Figure 2.3-4 and GHF 5000/6300 see Figure 2.3-5).

Figure 2.3-1

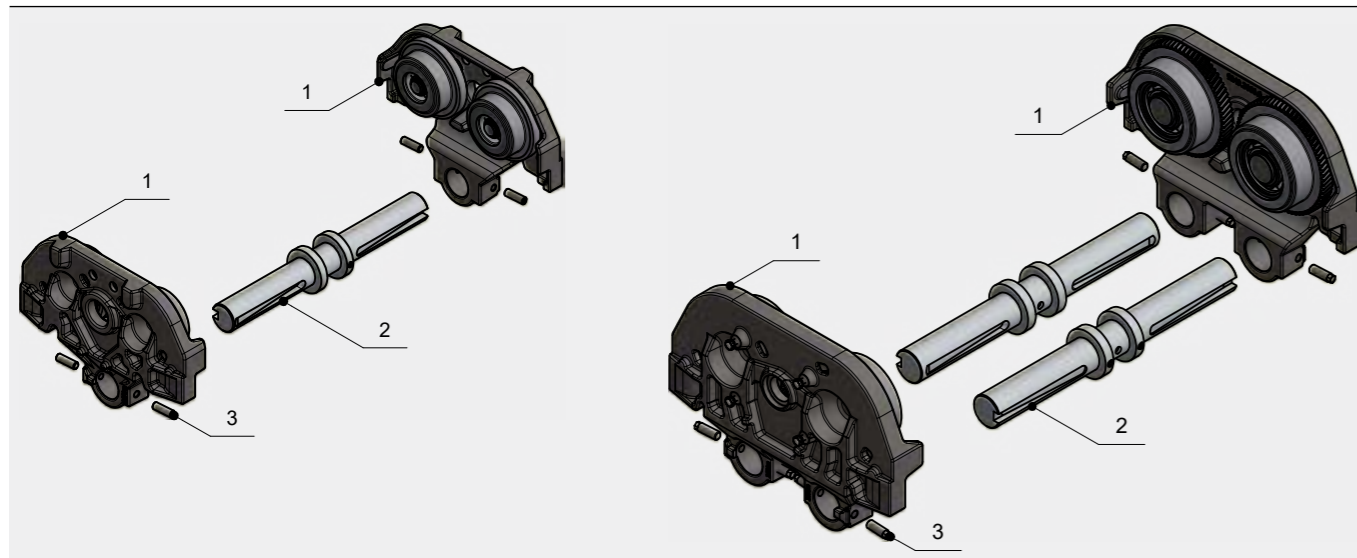


Figure 2.3-2

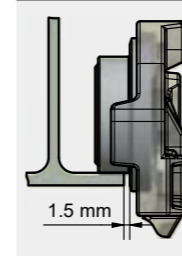


Figure 2.3-3

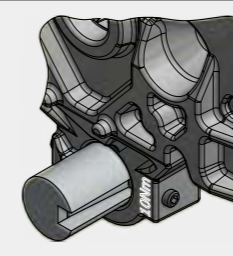


Figure 2.3-4


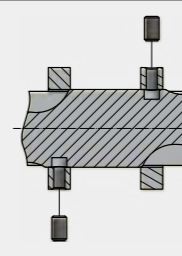


Figure 2.3-5

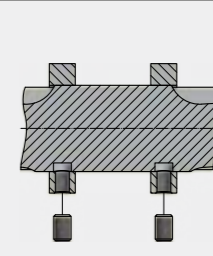

### 2.4 Motorized trolley

#### Checking the lifting capacity:

The lifting capacity of the trolley must be at least equal to the lifting capacity of the electric chain hoist.

#### Checking the flange width:

The flange width of the bracket must be within the adjustment range of the support shaft supplied (see Table 5-8).

#### Installation of the trolley (see Figure 2.4-6):


The counterweight (1) is attached to the side plate with untoothed load wheels (2) using two screws (3). The drive (4), consisting of transmission, motor and control, is installed on the side plate with toothed load wheels (5) using four screws. The two side plates are now pushed onto the support shaft with the adjusting rings (6) and fixed with the grub screws (7). These must be tightened to the following torque: GMF 1250 = 10 Nm (7 ft/lbs), GMF 2500 = 22 Nm (16 ft/lbs), GMF 4000/5000 = 18 Nm (13 ft/lbs), GMF 6300 = 24 Nm (18 ft/lbs). When doing so, it must be ensured that the excess length of the support shaft is evenly distributed on both sides. For the installation of a chain hoist it may be necessary to remove an adjustment ring.


⚠ The running clearance between the load wheel and the bracket must be 1.5 mm each (see Figure 2.4-7). To prevent the trolley from tipping over, an additional weight must be bolted to the counterweight if the flange width is small (see Figure 2.4-8).

⚠ The grub screws for fixing the support shaft to the side plate are provided with a captive screw lock. The keyways in the support shaft must be aligned exactly with the grub screws. The grub screws cannot be reused (see Figure 2.4-9).

⚠ The grub screws for fixing the adjusting rings on the support shaft are provided with a captive screw lock. The grub screws must be aligned exactly with the holes in the support shaft (GMF 1250/2500 see Figure 2.4-10 and GMF 4000/5000/6300 see Figure 2.4-11).

Figure 2.4-6

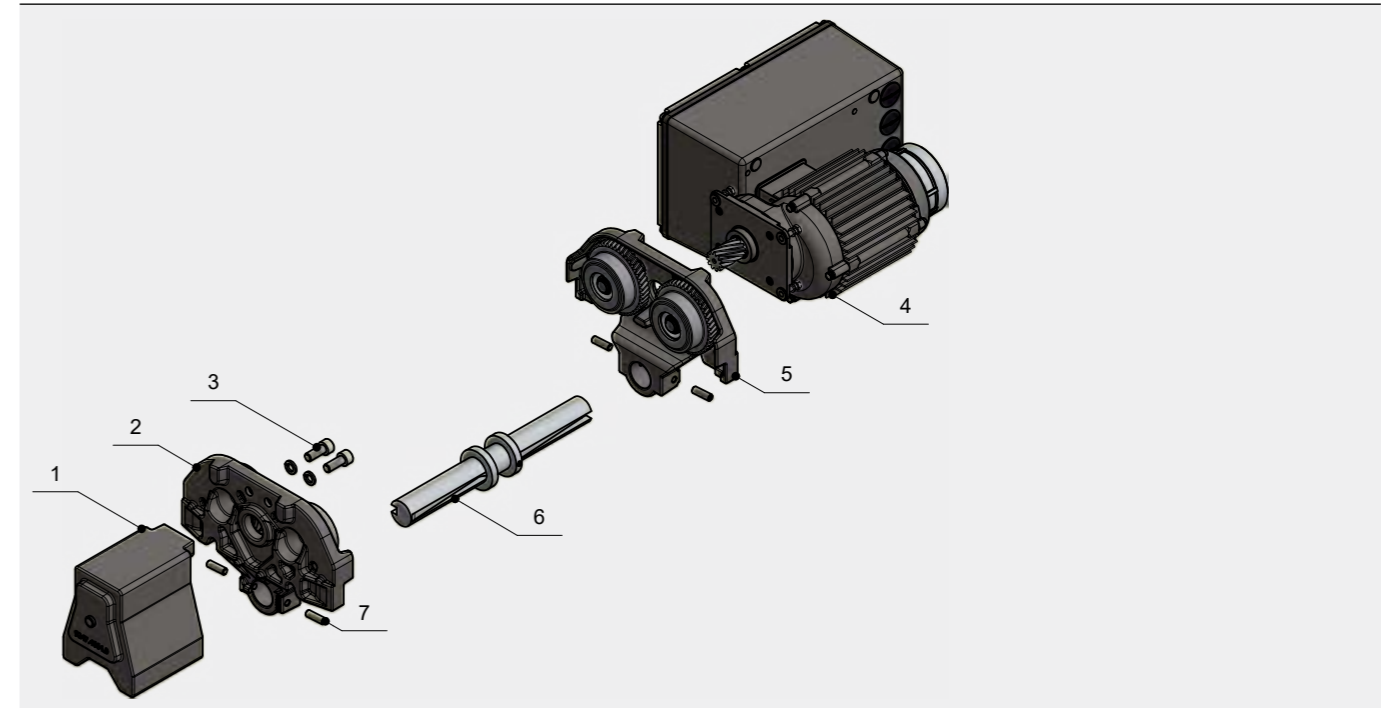

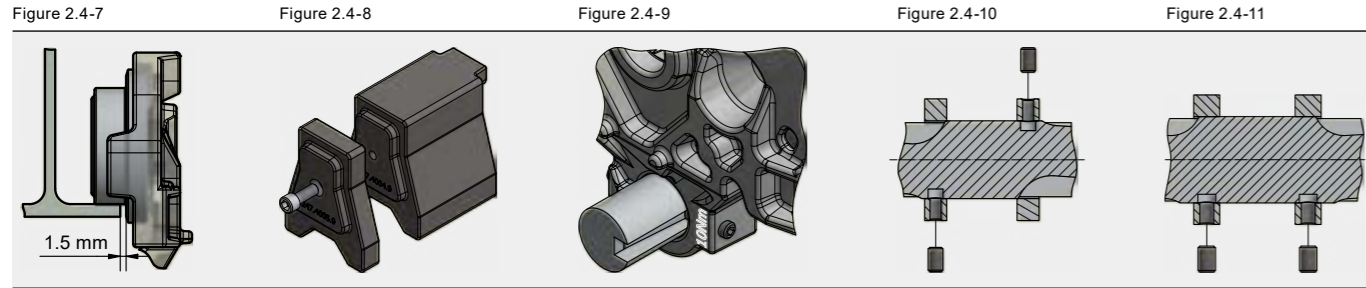

**2.4.1 Electrical connection**

Electrical installations may only be performed by authorized specialists.





The main connection cable, the main connection fuse and the main switch for connecting the motorized trolley to the mains power supply must be provided by the customer. A 4-wire cable with a PE protective conductor is needed as a supply line for three-phase versions. A 3-wire cable with a protective conductor is adequate for single-phase version. The length and cross-section must be appropriate for the power consumption of the motorized trolley and the electric chain hoist. An electrical circuit diagram is enclosed with each motorized trolley.

- Before connecting the motorized trolley, check whether the operation voltage and frequency specified on the type plate correspond to the available power supply.
- Remove the cover from the control unit box.
- Introduce the mains connection cable with cable gland M25 × 1.5 through the rear lower hole and connect in accordance with the attached electrical circuit diagram to L1E L2E, L3E and PE (see Figure 2.4.1-12).
- When operating an electric chain hoist, introduce the connection cable with cable gland M25 × 1.5 into the side hole and connect it to terminals 1H, 2H, 3H, 4H, L1A, L2A, L3A and PE (see Figure 2.4.1-13). On the electric chain hoist, the connection cable is connected to terminals 1, 2, 3, 4, L1, L2, L3 and PE. Terminals 1 and 10 must be bridged.
- For the GMF 5000 and GMF 6300 types, a connection cable is supplied for both drive motors. It is connected on both sides to the motor connections U, V1, W1, V2, W2 and for the brake to U and L2.
- Introduce the control cable from the 4-button control switch with cable gland M25 × 1.5 into the front lower hole and connect to terminals 1, 2, 3, 4, 50 for the travel movement and 1H, 2H, 3H, 4H for the lifting movement. Install the cable internal strain relief on the control plate (see Figure 2.4.1-14).
- Re-fit the cover from the control unit box.



- To maintain the predetermined protection class IP 54, all cables must fit into the corresponding cable glands and the cover screws must be tightened after the connection with the torque specified in Table 3.2.5.
- Open holes must be provided with a sealing plug.
- The control switch must be attached to the strain relief cord and not to the cable.

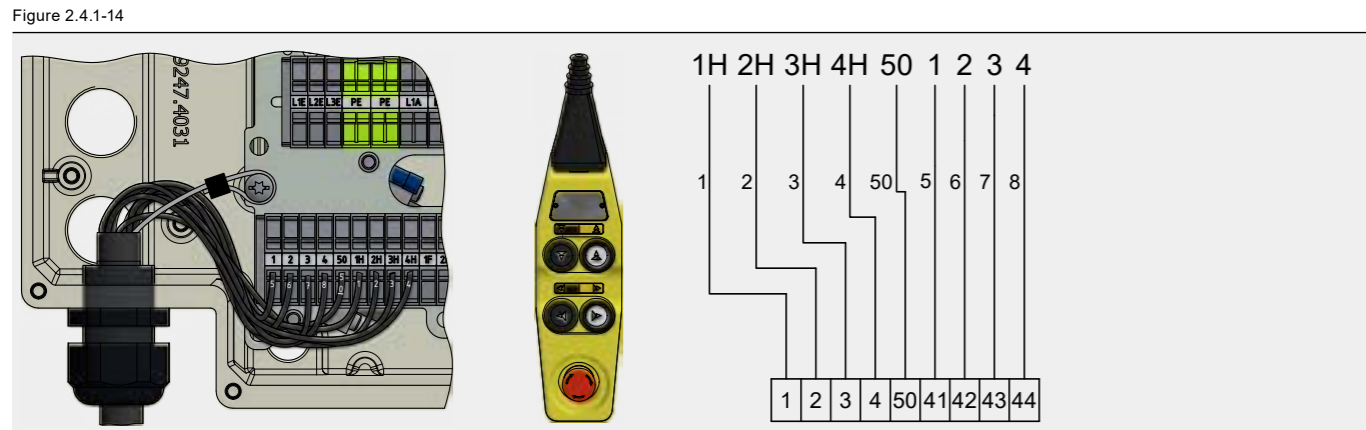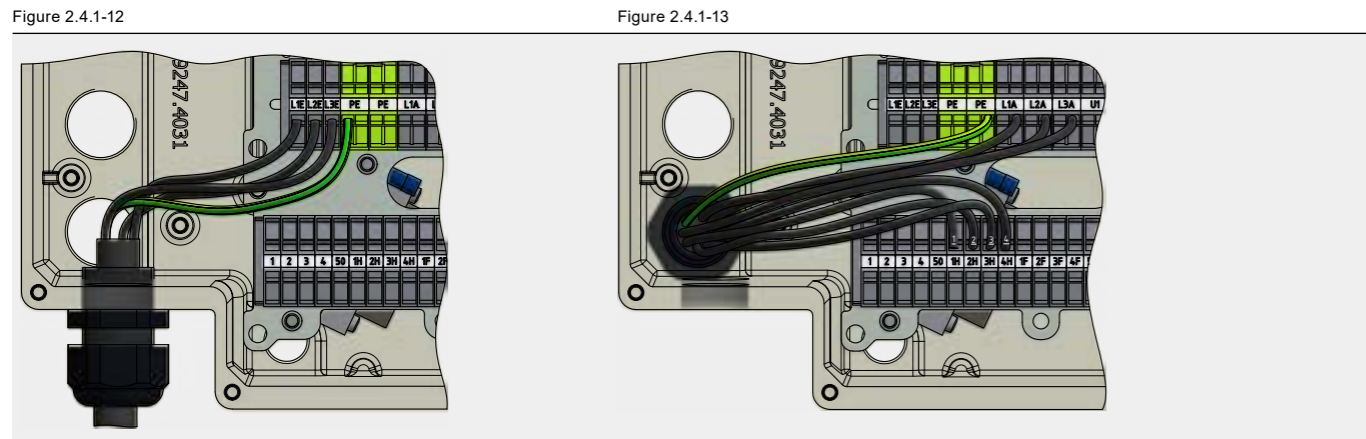

The protective conductor should not conduct any current during operation. With the installation of a motor protection breaker, the current of the motorized trolley and electric chain hoist must be observed in accordance with the type plate.




Checking direction of rotation: If the directions of movement do not match the button symbols of the control switch, the supply line wires L1 and L2 must be transposed.



Open the terminal used in accordance with Figure 2.4.1-15.

Figure 2.4.1-15

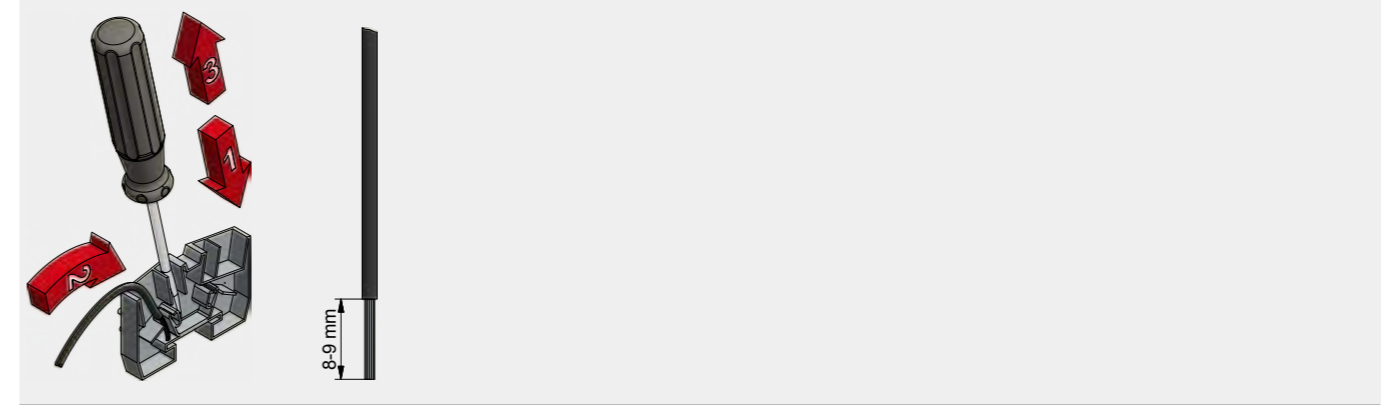

**3 Care and maintenance**

**3.1 General guidelines for maintenance and repair**

General guidelines for maintenance and repair



Maintenance and repair work on the trolley may only be carried out by qualified and trained personnel.



If the operator performs maintenance work on a trolley on their own, the type of maintenance performed together with the date carried out must be entered in the inspection report.

Alterations, as well as modifications and additions to trolleys, which may affect safety, must be authorized by the manufacturer in advance. Structural alterations to trolleys not authorized by the manufacturer exempt the manufacturer from liability in the event of damage. Material warranty claims will only be recognized as valid if original manufacturer's spare parts are used exclusively. We explicitly advise that original parts and accessories not delivered by us are also not checked or approved by us.

**General:**

Care and maintenance tasks are preventive measures designed to preserve the full functionality of trolleys. Non-compliance with care and maintenance routines can result in limited use and damage to trolleys. Care and maintenance should be carried out in accordance with the instruction manual at predefined time intervals (Table 3-1 and 3-2). During care and maintenance work, general accident prevention directions, special safety directions (Chapter 0.3) as well as hazard protection instructions (Chapter 0.4) should be followed.



Care and maintenance work should be performed only on trolleys with no loads. The main switch must be off.

Care work encompasses visual checks and cleaning routines. Maintenance work includes additional functional checks. During the functional checks, all fixing elements and cable clamps must be checked for tightness. Cables must be inspected for dirt, discolouration and arc spots.



Used operating materials (oil, grease, etc.) should be safely collected and disposed of in an environmentally friendly manner.

**Care and maintenance intervals are defined as follows:**

d (daily), 3 M (quarterly), 12 M (annually)

The predefined care and maintenance intervals should be reduced when the loading of the trolleys is exceptionally large or when frequently operated in adverse conditions (e.g. dust, heat, humidity, steam, etc.).



### 3.2 Care and maintenance

The trolleys are largely maintenance-free. Unusual noises during daily use must be reported to the competent authority immediately. A pending repair must be carried out immediately.

#### 3.2.1 Care overview

Table 3-1 Care overview

Designation	t	3 M	12 M	Task	Remark
1. Trolley	x			Check for abnormal noise / sealing	
2. Electric power supply cable	x			Visual check	
3. Sealing		x		Visual check	
4. Strain relief control cable	x			Visual check	

#### 3.2.2 Maintenance overview

Table 3-2 Maintenance overview

Designation	t	3 M	12 M	Task	Remark
1. Brake system	x		x	Function check with load	Chapter 3.2.3
2. Electrical equipment			x	Function check	
3. Support shaft			x	Check for cracks Check screw torque	Chapter 3.2.5
4. Load wheels			x	Check for wear	Chapter 3.2.6
5. Drive, toothing			x	Visual inspection for wear	Chapter 3.2.4
6. Leaktightness			x	Check screw torques of the covers	Chapter 3.2.5

#### 3.2.3 Brake system

The spring-loaded brake is a solenoid-operated, single disc brake with two friction surfaces. The braking force is applied by a spring. The braking torque is generated when no current is applied. The brake release is solenoid-operated. The brake operates with AC current.



The brake coil voltage must be the same as the operation voltage.



The brake has no air gap adjustment. If the maximum air gap is reached (a max., Table 3-3 and Figure 3-1) reached, the lining and the brake disc must be replaced.


Table 3-3 Air gap (Metric)

Designation		GMF 1250	GMF 2500	GMF 4000/5000	GMF 6300
Nominal value air gap (a)	[mm]	0.2 (+0.1 / -0.05)	0.2 (+0.1 / -0.05)	0.2 (+0.1 / -0.05)	0.2 (+0.1 / -0.05)
Air gap (a max.)	[mm]	0.6	0.6	0.6	0.6
Holding torque	[Nm]	2	2	2	2
Screw tightening torque	[Nm]	3	3	3	3

Table 3-3 Air gap (Imperial)

Designation		GMF 1250	GMF 2500	GMF 4000/5000	GMF 6300
Nominal value air gap (a)	[in]	0.008 (+0.004 / -0.002)	0.008 (+0.004 / -0.002)	0.008 (+0.004 / -0.002)	0.008 (+0.004 / -0.002)
Air gap (a max.)	[in]	0.02	0.02	0.02	0.02
Holding torque	[ft/lbs]	1.5	1.5	1.5	1.5
Screw tightening torque	[ft/lbs]	2.2	2.2	2.2	2.2

Figure 3-1

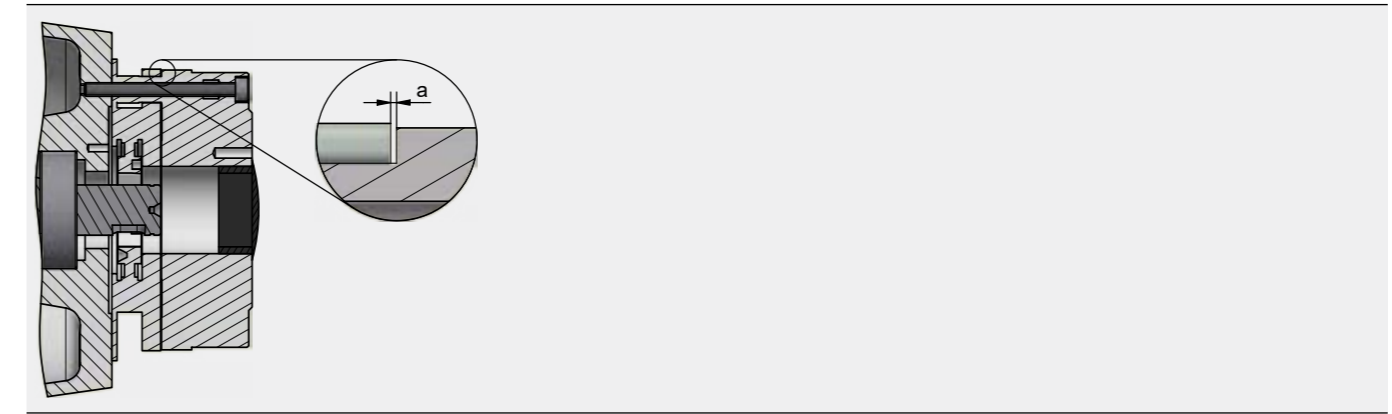

#### 3.2.4 Transmission

The transmission of the motorized trolley has permanent lubrication.

Lubricant.....: Strub HT PU 680.  
Mixable and compatible with all other brand greases of the same type (DIN 51502: KP 1 S-20).

Quantity of lubricant .....: 110 ml.

#### 3.2.5 Tightening torques

Torque values for screws of strength class 8.8 per DIN ISO 898:

M 4	M 5	M 6	M 8	M 10	M 12
3.3 Nm (2 ft/lbs)	6.5 Nm (5 ft/lbs)	10 Nm (7 ft/lbs)	24 Nm (18 ft/lbs)	48 Nm (35 ft/lbs)	83 Nm (61 ft/lbs)

#### 3.2.6 Load wheels

The load wheels must be periodically checked for wear and, where necessary, replaced.




If the load wheels show damage, cracks, deformation or corrosion, they must be replaced. If the prescribed dimensions (min.) no longer comply with Table 3-4 and Figure 3-2, the load wheels must also be replaced.

Table 3-4 Load wheel wear values

Designation	GHF 1250 GMF 1250		GHF 2500 GMF 2500		GHF 5000 GMF 4000/5000		GHF 6300 GMF 6300	
	d	[mm]	d	[mm]	d	[mm]	d	[mm]
Load wheel		68 (2.7 in)		85 (3.4 in)		105 (4.1 in)		130 (5.1 in)
	d min.	60 (2.4 in)		77 (3 in)		95 (3.7 in)		118 (4.7 in)

Figure 3-2

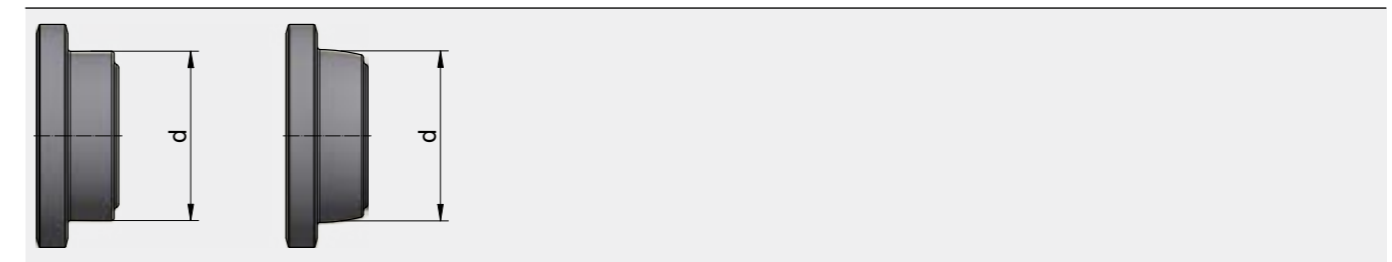

## 4 Measures for achieving safe operating periods

The statutory and health requirements of the regulations stipulate that specific dangers which may arise from fatigue or aging must be prevented. Accordingly, operators of series trolleys are obliged to determine the actual use. The actual use is recorded as part of the annual inspection by customer service engineers. A general overhaul must be carried out when the theoretical full load cycles are reached, or after no more than 10 years. All checking and the general overhaul itself must be arranged by the operator of the trolley.

(ISO and HMI)	A3 (M3)	A4 (M4)	A5 (M5)	A6 (M6)
Load spectrum	Number of load cycles throughout the whole service life			
Q2 = 0.50	250,000	500,000	1,000,000	2,000,000
Q3 = 0.63	125,000	250,000	500,000	1,000,000
Q4 = 0.80	63,000	125,000	250,000	500,000
Q5 = 1.00	31,500	63,000	125,000	250,000

### 4.1 Determining the actual use

The actual use depends on the daily operating cycles and the load spectrum. Operating cycles are determined from information provided by the operator or recorded using a meter that counts the number of operating cycles. The load spectrum is determined in accordance with Table 1-1, page 10. With these both values, the annual use can be found in Table 4-1. If an operating data acquisition system (BDE) is used, the actual use can be read out directly by our experts during the annual inspection.



The values periodically calculated or read-off are to be recorded in the inspection report.

#### Example:

A trolley with A4 classification is used with the load type <Q4 heavy> (Q = 0.80, see Table 1-1). Use per working day is 60 cycles. According to Table 4-1, this results in a theoretical annual use of 6,300 full load cycles. A theoretical operating period of 19.8 years can thus be derived from the theoretical total service life of 125,000 full load cycles. A general overhaul must be carried out after 10 years at the latest, during which the further use is determined.

Table 4-1 Annual use (208 working days/year)

Number of cycles per working day	<= 15 (15)	<= 30 (30)	<= 60 (60)	<= 120 (120)	<= 240 (240)	<= 480 (480)	<= 960 (960)	<= 1920 (1920)
Load spectrum	Annual use in full load cycles							
Q2 = 0.50	400	800	1,600	3,150	6,300	12,500	25,000	50,000
Q3 = 0.63	800	1,600	3,150	6,300	12,500	25,000	50,000	100,000
Q4 = 0.80	1,600	3,150	6,300	12,500	25,000	50,000	100,000	200,000
Q5 = 1.00	3,150	6,300	12,500	25,000	50,000	100,000	200,000	400,000

### 4.2 General overhaul

On reaching the theoretical full load cycles (no later than 10 years for recording without BDE), a general overhaul should be performed. This enables the equipment to continue operating safely for a further period of time. Components must be checked or replaced in accordance with Table 4-2. The checking and release for the further use must be done by a specialist company authorized by the manufacturer or by the manufacturer themselves.

#### The inspector determines:

- What new theoretical full load cycles are possible.
- The max. period until the next general overhaul.

This data should be recorded in the inspection report.

Table 4-2 General overhaul

Components of trolleys, all types	Check for wear *	Replace
Brake	x	
Motor shaft	x	
Gear teeth		x
Roller bearing		x
Seals		x
Support shaft	x	
Load wheels	x	
Contactors	x	

\* replace if worn

### 4.3 Disposal

If the device can no longer be used, it must be disposed of in an environmentally safe manner. Lubricants, such as oils and greases, must be disposed in accordance with the applicable waste law. Metals and plastics are to be recycled.

## 5 Annex

### 5.1 Technical data (Metric)

Table 5-1 GHF/GMF technical data (three-phase version)

Series	A3 (M3) 15 C/d (25% duty)	A4 (M4) 30 C/d (30% duty)	A5 (M5) 60 C/d (40% duty)	A6 (M6) 120 C/d (50% duty)	A6 (M6) 120 C/d (50% duty)	Travel speed 50 Hz	Travel speed 60 Hz	Motor type	Dead weight	Main fuse (with hoist, 400 V, slow-blow)
	Load capacity [kg]					[m/min]	[m/min]		[kg]	[A]
GHF 1250	1250	1000	800	630	500	-	-	-	11	-
GMF 1250/NF	1250	1000	800	630	500	12/4	14.4/4.8	B9 71 12/4	30	10
GMF 1250/SF	1250	1000	800	630	500	24/6	28.8/7.2	B9 71 8/2	30	10
GMF 1250/N	1250	1000	800	630	500	12	14.4	B9 71 4	29	10
GHF 2500	2500	2000	1600	1250	1000	-	-	-	20	-
GMF 2500/NF	2500	2000	1600	1250	1000	12/4	14.4/4.8	B9 71 12/4	38	10
GMF 2500/SF	2500	2000	1600	1250	1000	24/6	28.8/7.2	B9 71 8/2	38	10
GMF 2500/N	2500	2000	1600	1250	1000	12	14.4	B9 71 4	37	10
GMF 4000/NF	4000	3200	2500	-	-	12/4	14.4/4.8	B9 71 12/4	55	16
GMF 4000/SF	4000	3200	2500	-	-	24/6	28.8/7.2	B9 71 8/2	55	16
GHF 5000	5000	4000	3200	-	-	-	-	-	32	-
GMF 5000/NF	5000	4000	3200	-	-	12/4	14.4/4.8	B9 71 12/4	63	16
GMF 5000/SF	5000	4000	3200	-	-	24/6	28.8/7.2	B9 71 8/2	63	16
GHF 6300	6300	5000	4000	3200	-	-	-	-	47	-
GMF 6300/NF	6300	5000	4000	3200	-	12/4	14.4/4.8	B9 71 12/4	78	16
GMF 6300/SF	6300	5000	4000	3200	-	24/6	28.8/7.2	B9 71 8/2	78	16

Table 5-2 GHFR/GMFR technical data (three-phase version)

Series	A3 (M3) 15 C/d (25% duty)	A4 (M4) 30 C/d (30% duty)	A5 (M5) 60 C/d (40% duty)	A6 (M6) 120 C/d (50% duty)	A6 (M6) 120 C/d (50% duty)	Travel speed 50 Hz	Travel speed 60 Hz	Motor type	Dead weight	Main fuse (with hoist, 400 V, slow-blow)
	Load capacity [kg]					[m/min]	[m/min]		[kg]	[A]
GHFR 1250	630	500	400	320	250	-	-	-	11	-
GMFR 1250/NF	630	500	400	320	250	12/4	14.4/4.8	B9 71 12/4	30	10
GMFR 1250/SF	630	500	400	320	250	24/6	28.8/7.2	B9 71 8/2	30	10
GMFR 1250/N	630	500	400	320	250	12	14.4	B9 71 4	29	10
GHFR 2500	1250	1000	800	630	500	-	-	-	20	-
GMFR 2500/NF	1250	1000	800	630	500	12/4	14.4/4.8	B9 71 12/4	38	10
GMFR 2500/SF	1250	1000	800	630	500	24/6	28.8/7.2	B9 71 8/2	38	10
GMFR 2500/N	1250	1000	800	630	500	12	14.4	B9 71 4	37	10

Table 5-3 GMF FU technical data (three-phase version)

Series	A3 (M3) 15 C/d (25% duty)	A4 (M4) 30 C/d (30% duty)	A5 (M5) 60 C/d (40% duty)	A6 (M6) 120 C/d (50% duty)	A6 (M6) 120 C/d (50% duty)	Travel speed 50 Hz	Travel speed 15/87 Hz	Motor type	Dead weight	Main fuse (with hoist, 400 V, slow-blow)
	Load capacity [kg]					[m/min]	[m/min]		[kg]	[A]
GMF 1250/N FU	1250	1000	800	630	500	12	3.6/20	B9 71 4	29	10
GMF 1250/S FU	1250	1000	800	630	500	20	6/30	B9 71 4	29	10
GMF 2500/N FU	2500	2000	1600	1250	1000	12	3.6/20	B9 71 4	37	10
GMF 2500/S FU	2500	2000	1600	1250	1000	20	6/30	B9 71 4	37	10
GMF 4000/N FU	4000	3200	2500	-	-	12	3.6/20	B9 71 4	54	16
GMF 5000/N FU	5000	4000	3200	-	-	12	3.6/20	B9 71 4	62	16
GMF 5000/S FU	5000	4000	3200	-	-	20	6/30	B9 71 4	62	16
GMF 6300/N FU	6300	5000	4000	3200	-	12	3.6/20	B9 71 4	77	16

Table 5-4 GMFR FU technical data (three-phase version)

Series	A3 (M3) 15 C/d (25% duty)	A4 (M4) 30 C/d (30% duty)	A5 (M5) 60 C/d (40% duty)	A6 (M6) 120 C/d (50% duty)	A6 (M6) 120 C/d (50% duty)	Travel speed 50 Hz	Travel speed 15/87 Hz	Motor type	Dead weight	Main fuse (with hoist, 400 V, slow-blow)
	Load capacity [kg]					[m/min]	[m/min]		[kg]	[A]
GMFR 1250/N FU	630	500	400	320	250	12	3.6/20	B9 71 4	29	10
GMFR 1250/S FU	630	500	400	320	250	20	6/30	B9 71 4	29	10
GMFR 2500/N FU	1250	1000	800	630	500	12	3.6/20	B9 71 4	37	10
GMFR 2500/S FU	1250	1000	800	630	500	20	6/30	B9 71 4	37	10

Table 5-5 GMFO technical data (three-phase version)

Series	A3 (M3) 15 C/d (25% duty)	A4 (M4) 30 C/d (30% duty)	A5 (M5) 60 C/d (40% duty)	A6 (M6) 120 C/d (50% duty)	A6 (M6) 120 C/d (50% duty)	Travel speed 50 Hz	Travel speed 60 Hz	Motor type	Dead weight	Main fuse (with hoist, 400 V, slow-blow)
	Load capacity [kg]					[m/min]	[m/min]		[kg]	[A]
GMFO 1250/NF	1250	1000	800	630	500	12/4	14.4/4.8	B9 71 12/4	29	10
GMFO 1250/SF	1250	1000	800	630	500	24/6	28.8/7.2	B9 71 8/2	29	10
GMFO 1250/N	1250	1000	800	630	500	12	14.4	B9 71 4	28	10
GMFO 2500/NF	2500	2000	1600	1250	1000	12/4	14.4/4.8	B9 71 12/4	37	10
GMFO 2500/SF	2500	2000	1600	1250	1000	24/6	28.8/7.2	B9 71 8/2	37	10
GMFO 2500/N	2500	2000	1600	1250	1000	12	14.4	B9 71 4	36	10
GMFO 4000/NF	4000	3200	2500	-	-	12/4	14.4/4.8	B9 71 12/4	54	16
GMFO 4000/SF	4000	3200	2500	-	-	24/6	28.8/7.2	B9 71 8/2	54	16
GMFO 5000/NF	5000	4000	3200	-	-	12/4	14.4/4.8	B9 71 12/4	62	16
GMFO 5000/SF	5000	4000	3200	-	-	24/6	28.8/7.2	B9 71 8/2	62	16
GMFO 6300/NF	6300	5000	4000	3200	-	12/4	14.4/4.8	B9 71 12/4	77	16
GMFO 6300/SF	6300	5000	4000	3200	-	24/6	28.8/7.2	B9 71 8/2	77	16

Table 5-6 GMF technical data (single-phase version)

Series	A3 (M3) 15 C/d (25% duty)	A4 (M4) 30 C/d (30% duty)	A5 (M5) 60 C/d (40% duty)	A6 (M6) 120 C/d (50% duty)	A6 (M6) 120 C/d (50% duty)	Travel speed 50 Hz	Travel speed 60 Hz	Motor type	Dead weight	Main fuse (with hoist, 230 V, slow-blow)
	Load capacity [kg]					[m/min]	[m/min]		[kg]	[A]
GMF 1250/N 1Ph	1250	1000	800	630	500	12	14.4	B9 71 4	29	16
GMF 2500/N 1Ph	2500	2000	1600	1250	1000	12	14.4	B9 71 4	37	16

Table 5-7 GMFR technical data (single-phase version)

Series	A3 (M3) 15 C/d (25% duty)	A4 (M4) 30 C/d (30% duty)	A5 (M5) 60 C/d (40% duty)	A6 (M6) 120 C/d (50% duty)	A6 (M6) 120 C/d (50% duty)	Travel speed 50 Hz	Travel speed 60 Hz	Motor type	Dead weight	Main fuse (with hoist, 230 V, slow-blow)
	Load capacity [kg]					[m/min]	[m/min]		[kg]	[A]
GMFR 1250/N 1Ph	630	500	400	320	250	12	14.4	B9 71 4	29	16
GMFR 2500/N 1Ph	1250	1000	800	630	500	12	14.4	B9 71 4	37	16

Table 5-8 Support shaft technical data

Series	Number of support shafts	Support shaft length [mm]	Support shaft diameter [mm]	Flange width range [mm]
GHF 1250 / GMF 1250	1	186	32	70 - 140
GHF 1250 / GMF 2500	1	286	32	70 - 240
GHF 2500 / GMF 2500	1	258	42	88 - 200
GHF 2500 / GMF 5000	1	358	42	88 - 300
GHF 5000 / GMF 4000/5000	2	368	40	91 - 300
GHF 6300 / GMF 6300	2	392	45	91 - 300

## 5 Annex

### 5.1 Technical data (Imperial)

Table 5-1 GHF/GMF technical data (three-phase version)

Series	A3 (M3) 15 C/d (25% duty)	A4 (M4) 30 C/d (30% duty)	A5 (M5) 60 C/d (40% duty)	A6 (M6) 120 C/d (50% duty)	A6 (M6) 120 C/d (50% duty)	Travel speed 50 Hz	Travel speed 60 Hz	Motor type	Dead weight	Main fuse (with hoist, 400 V, slow-blow)
	Load capacity [lbs]					[ft/min]	[ft/min]		[lbs]	[A]
GHF 1250	2756	2205	1764	1389	1102	-	-	-	24	-
GMF 1250/NF	2756	2205	1764	1389	1102	39.4/13.1	47.2/15.7	B9 71 12/4	66	10
GMF 1250/SF	2756	2205	1764	1389	1102	78.7/19.7	94.5/23.6	B9 71 8/2	66	10
GMF 1250/N	2756	2205	1764	1389	1102	39.4	47.2	B9 71 4	64	10
GHF 2500	5512	4409	3527	2756	2205	-	-	-	44	-
GMF 2500/NF	5512	4409	3527	2756	2205	39.4/13.1	47.2/15.7	B9 71 12/4	84	10
GMF 2500/SF	5512	4409	3527	2756	2205	78.7/19.7	94.5/23.6	B9 71 8/2	84	10
GMF 2500/N	5512	2000	3527	2756	2205	39.4	47.2	B9 71 4	82	10
GMF 4000/NF	8819	7705	5512	-	-	39.4/13.1	47.2/15.7	B9 71 12/4	121	16
GMF 4000/SF	8819	7705	5512	-	-	78.7/19.7	94.5/23.6	B9 71 8/2	121	16
GHF 5000	11023	8819	7705	-	-	-	-	-	71	-
GMF 5000/NF	11023	8819	7705	-	-	39.4/13.1	47.2/15.7	B9 71 12/4	139	16
GMF 5000/SF	11023	8819	7705	-	-	78.7/19.7	94.5/23.6	B9 71 8/2	139	16
GHF 6300	13889	11023	8819	7705	-	-	-	-	104	-
GMF 6300/NF	13889	11023	8819	7705	-	39.4/13.1	47.2/15.7	B9 71 12/4	172	16
GMF 6300/SF	13889	11023	8819	7705	-	78.7/19.7	94.5/23.6	B9 71 8/2	172	16

Table 5-2 GHFR/GMFR technical data (three-phase version)

Series	A3 (M3) 15 C/d (25% duty)	A4 (M4) 30 C/d (30% duty)	A5 (M5) 60 C/d (40% duty)	A6 (M6) 120 C/d (50% duty)	A6 (M6) 120 C/d (50% duty)	Travel speed 50 Hz	Travel speed 60 Hz	Motor type	Dead weight	Main fuse (with hoist, 400 V, slow-blow)
	Load capacity [lbs]					[ft/min]	[ft/min]		[lbs]	[A]
GHFR 1250	1389	1102	882	3706	551	-	-	-	24	-
GMFR 1250/NF	1389	1102	882	3706	551	39.4/13.1	47.2/15.7	B9 71 12/4	66	10
GMFR 1250/SF	1389	1102	882	3706	551	78.7/19.7	94.5/23.6	B9 71 8/2	66	10
GMFR 1250/N	1389	1102	882	3706	551	39.4	47.2	B9 71 4	64	10
GHFR 2500	2756	2205	1764	1389	1102	-	-	-	44	-
GMFR 2500/NF	2756	2205	1764	1389	1102	39.4/13.1	47.2/4.8	B9 71 12/4	84	10
GMFR 2500/SF	2756	2205	1764	1389	1102	78.7/19.7	94.5/23.6	B9 71 8/2	84	10
GMFR 2500/N	2756	2205	1764	1389	1102	39.4	47.2	B9 71 4	82	10

Table 5-3 GMF FU technical data (three-phase version)

Series	A3 (M3) 15 C/d (25% duty)	A4 (M4) 30 C/d (30% duty)	A5 (M5) 60 C/d (40% duty)	A6 (M6) 120 C/d (50% duty)	A6 (M6) 120 C/d (50% duty)	Travel speed 50 Hz	Travel speed 15/87 Hz	Motor type	Dead weight	Main fuse (with hoist, 400 V, slow-blow)
	Load capacity [lbs]					[ft/min]	[ft/min]		[lbs]	[A]
GMF 1250/N FU	2756	2205	1764	1389	1102	39.4	11.8/65.6	B9 71 4	64	10
GMF 1250/S FU	2756	2205	1764	1389	1102	65.6	19.7/98.4	B9 71 4	64	10
GMF 2500/N FU	5512	4409	3527	2756	2205	39.4	11.8/65.6	B9 71 4	82	10
GMF 2500/S FU	5512	4409	3527	2756	2205	65.6	19.7/98.4	B9 71 4	82	10
GMF 4000/N FU	8819	7705	5512	-	-	39.4	11.8/65.6	B9 71 4	119	16
GMF 5000/N FU	11023	8819	7705	-	-	39.4	11.8/65.6	B9 71 4	137	16
GMF 5000/S FU	11023	8819	7705	-	-	65.6	19.7/98.4	B9 71 4	137	16
GMF 6300/N FU	13889	11023	8819	7705	-	39.4	11.8/65.6	B9 71 4	170	16

Table 5-4 GMFR FU technical data (three-phase version)

Series	A3 (M3) 15 C/d (25% duty)	A4 (M4) 30 C/d (30% duty)	A5 (M5) 60 C/d (40% duty)	A6 (M6) 120 C/d (50% duty)	A6 (M6) 120 C/d (50% duty)	Travel speed 50 Hz	Travel speed 15/87 Hz	Motor type	Dead weight	Main fuse (with hoist, 400 V, slow-blow)
	Load capacity [lbs]					[ft/min]	[ft/min]		[lbs]	[A]
GMFR 1250/N FU	1389	1102	882	706	551	39.4	11.8/65.6	B9 71 4	64	10
GMFR 1250/S FU	1389	1102	882	706	551	65.6	19.7/98.4	B9 71 4	64	10
GMFR 2500/N FU	2756	2205	1764	1389	1102	39.4	11.8/65.6	B9 71 4	82	10
GMFR 2500/S FU	2756	2205	1764	1389	1102	65.6	19.7/98.4	B9 71 4	82	10

Table 5-5 GMFO technical data (three-phase version)

Series	A3 (M3) 15 C/d (25% duty)	A4 (M4) 30 C/d (30% duty)	A5 (M5) 60 C/d (40% duty)	A6 (M6) 120 C/d (50% duty)	A6 (M6) 120 C/d (50% duty)	Travel speed 50 Hz	Travel speed 60 Hz	Motor type	Dead weight	Main fuse (with hoist, 400 V, slow-blow)
	Load capacity [lbs]					[ft/min]	[ft/min]		[lbs]	[A]
GMFO 1250/NF	2756	2205	1764	1389	1102	39.4/13.1	47.2/15.7	B9 71 12/4	64	10
GMFO 1250/SF	2756	2205	1764	1389	1102	78.7/19.7	94.5/23.6	B9 71 8/2	64	10
GMFO 1250/N	2756	2205	1764	1389	1102	39.4	47.2	B9 71 4	62	10
GMFO 2500/NF	5512	4409	3527	2756	2205	39.4/13.1	47.2/15.7	B9 71 12/4	82	10
GMFO 2500/SF	5512	4409	3527	2756	2205	78.7/19.7	94.5/23.6	B9 71 8/2	82	10
GMFO 2500/N	5512	4409	3527	2756	2205	39.4	47.2	B9 71 4	79	10
GMFO 4000/NF	8819	7705	5512	-	-	39.4/13.1	47.2/15.7	B9 71 12/4	119	16
GMFO 4000/SF	8819	7705	5512	-	-	78.7/19.7	94.5/23.6	B9 71 8/2	119	16
GMFO 5000/NF	11023	8819	7705	-	-	39.4/13.1	47.2/15.7	B9 71 12/4	137	16
GMFO 5000/SF	11023	8819	7705	-	-	78.7/19.7	94.5/23.6	B9 71 8/2	137	16
GMFO 6300/NF	13889	11023	8819	7705	-	39.4/13.1	47.2/15.7	B9 71 12/4	170	16
GMFO 6300/SF	13889	11023	8819	7705	-	78.7/19.7	94.5/23.6	B9 71 8/2	170	16

Table 5-6 GMF technical data (single-phase version)

Series	A3 (M3) 15 C/d (25% duty)	A4 (M4) 30 C/d (30% duty)	A5 (M5) 60 C/d (40% duty)	A6 (M6) 120 C/d (50% duty)	A6 (M6) 120 C/d (50% duty)	Travel speed 50 Hz	Travel speed 60 Hz	Motor type	Dead weight	Main fuse (with hoist, 230 V, slow-blow)
	Load capacity [lbs]					[ft/min]	[ft/min]		[lbs]	[A]
GMF 1250/N 1Ph	2756	2205	1764	1389	1102	39.4	47.2	B9 71 4	64	16
GMF 2500/N 1Ph	5512	4409	3527	2756	2205	39.4	47.2	B9 71 4	82	16

Table 5-7 GMFR technical data (single-phase version)

Series	A3 (M3) 15 C/d (25% duty)	A4 (M4) 30 C/d (30% duty)	A5 (M5) 60 C/d (40% duty)	A6 (M6) 120 C/d (50% duty)	A6 (M6) 120 C/d (50% duty)	Travel speed 50 Hz	Travel speed 60 Hz	Motor type	Dead weight	Main fuse (with hoist, 230 V, slow-blow)
	Load capacity [lbs]					[ft/min]	[ft/min]		[lbs]	[A]
GMFR 1250/N 1Ph	1389	1102	882	706	551	39.4	47.2	B9 71 4	64	16
GMFR 2500/N 1Ph	2756	2205	1764	1389	1102	39.4	47.2	B9 71 4	82	16

Table 5-8 Support shaft technical data

Series	Number of support shaft	Support shaft length [in]	Support shaft diameter [in]	Flange width range [in]
GHF 1250 / GMF 1250	1	0.3	1.3	2.8 - 5.5
GHF 1250 / GMF 1250	1	11.3	1.3	2.8 - 9.5
GHF 2500 / GMF 2500	1	10.2	1.7	3.5 - 7.9
GHF 2500 / GMF 2500	1	14.1	1.7	3.5 - 11.8
GHF 5000 / GMF 4000/5000	2	14.5	1.6	3.6 - 11.8
GHF 6300 / GMF 6300	2	15.4	(1.8)	3.6 - 300

**5.2 Electrical parameters**

Table 5-9 GMF electrical parameters (three-phase version)

Series	Motor type	No. of poles	P <sub>N</sub> [kW]	n <sub>N</sub> [1/min]	min. / max. currents and start-up current							
					3 x 400 V, 50 Hz				3 x 230 V, 50 Hz			
					I <sub>N400</sub> [A]	I <sub>max</sub> [A]	cos phi <sub>N</sub>	I <sub>N230</sub> [A]	I <sub>max</sub> [A]	cos phi <sub>N</sub>		
GMF	B9 71 12/4	12	0.045	410	0.75	0.9	0.56	1.2	1.4	0.56		
		4	0.15	1340	0.65	0.8	0.78	1.0	1.2	0.78		
GMF	B9 71 8/2	8	0.075	665	0.9	1.1	0.54	1.6	1.8	0.54		
		2	0.3	2745	1.0	1.2	0.74	1.8	2.0	0.74		
GMF	B9 71 4	4	0.25	1410	0.8	1.0	0.82	1.2	1.4	0.82		

Table 5-10 GMF electrical parameters (three-phase version)

Series	Motor type	No. of poles	P <sub>N</sub> [kW]	n <sub>N</sub> [1/min]	min. / max. currents and start-up current							
					3 x 460 V, 60 Hz							
					I <sub>N460</sub> [A]	I <sub>max</sub> [A]	cos phi <sub>N</sub>					
GMF	B9 71 12/4	12	0.054	490	0.75	0.9	0.56					
		4	0.18	1610	0.65	0.8	0.78					
GMF	B9 71 8/2	8	0.09	815	0.9	1.1	0.54					
		2	0.36	3345	1.0	1.2	0.74					
GMF	B9 71 4	4	0.3	1690	0.8	1.0	0.82					

Table 5-11 GMF electrical parameters (three-phase version)

Series	Motor type	No. of poles	P <sub>N</sub> [kW]	n <sub>N</sub> [1/min]	min. / max. currents and start-up current							
					3 x 230 V, 60 Hz				3 x 575 V, 60 Hz			
					I <sub>N230</sub> [A]	I <sub>max</sub> [A]	cos phi <sub>N</sub>	I <sub>N575</sub> [A]	I <sub>max</sub> [A]	cos phi <sub>N</sub>		
GMF	B9 71 12/4	12	0.054	490	1.5	1.7	0.56	0.6	0.8	0.56		
		4	0.18	1610	1.3	1.5	0.78	0.5	0.7	0.78		
GMF	B9 71 8/2	8	0.09	815	1.7	1.9	0.54	0.8	1.0	0.54		
		2	0.36	3345	2.1	2.3	0.74	0.9	1.1	0.74		
GMF	B9 71 4	4	0.3	1690	1.7	1.9	0.82	0.6	0.8	0.82		

Table 5-12 GMF electrical parameters (single-phase version)

Series	Motor type	No. of poles	P <sub>N</sub> [kW]	n <sub>N</sub> [1/min]	min. / max. currents and start-up current							
					1 x 115 V, 50 Hz				1 x 230 V, 50 Hz			
					I <sub>N115</sub> [A]	I <sub>max</sub> [A]	cos phi <sub>N</sub>	I <sub>N230</sub> [A]	I <sub>max</sub> [A]	cos phi <sub>N</sub>		
GMF	B9 71 4	4	0.25	1410	2.2	2.4	0.82	1.0	1.2	0.82		

Table 5-13 GMF electrical parameters (single-phase version)

Series	Motor type	No. of poles	P <sub>N</sub> [kW]	n <sub>N</sub> [1/min]	min. / max. currents and start-up current							
					1 x 115 V, 60 Hz				1 x 230 V, 60 Hz			
					I <sub>N115</sub> [A]	I <sub>max</sub> [A]	cos phi <sub>N</sub>	I <sub>N230</sub> [A]	I <sub>max</sub> [A]	cos phi <sub>N</sub>		
GMF	B9 71 4	4	0.3	1690	3.9	4.1	0.82	1.0	1.2	0.82		

**SPANCO® WARRANTY**

**PRODUCT WARRANTY COVERAGE**

**Two-Year Warranty Coverage:**

- Defects in equipment material and workmanship of Spanco Workmate electric chain hoists and equipment
- Defects in equipment material and workmanship of motorized systems and equipment
- Paint coatings and finishes in normal operating environments
- Excludes wear items

Spanco warrants motorized equipment to be free from defects in material and workmanship for a period of two (2) years, commencing on the date of shipment to the first retail purchaser. Spanco warrants its paint and finishes for a period of two (2) years. Warranty claims related to coatings must be accompanied by documentation of the product's application and environmental conditions from time of delivery to time of claim.

**WARRANTY TERMS & CONDITIONS**

All warranty claims must be approved by Spanco before any work is performed. Spanco's obligation under this warranty is limited to the replacement or repair of Spanco products at the factory or separate location approved by Spanco. **Other than the above mentioned warranty, Spanco will not honor any other warranties—whether expressed, implied, or statutory—and disclaims any warranties of merchantability or fitness for a particular purpose.** Spanco has the right to reject any warranty claim due to harsh and/or inappropriate environmental conditions.

**Spanco Is Not Liable for:**

- Indirect, incidental, or consequential damages including lost profits, operating costs, loss of production, or travel expenses
- Components or accessories not manufactured by Spanco
- Defective equipment or system failure caused by misuse, negligence, and improper installation or maintenance
- Equipment that has been used in excess of its rated capacity or beyond its service factors
- Rework and modification of any equipment that has been altered without Spanco's written authorization
- Freight charges and damage incurred by freight carriers
- Any loss, injury, or damage to persons or property resulting from failure or defective operation of material or equipment
- Any damage to paint coatings and finishes caused by negligence and improper storage, such as temporarily storing an indoor system outdoors

**Reimbursement Disclaimer:**

- Written notice of any claimed system defect must be given to Spanco within ninety (90) days of shipment.
- All requests for reimbursement must be accompanied by proper documentation.
- Reimbursement is provided in the form of a credit unless otherwise approved by Spanco management.
- Reimbursement for labor will be provided at a maximum rate of \$90 per hour.
- All reimbursement is subject to approval by Spanco management.

## ABOUT SPANCO®

### Our Commitment

Spanco professionals are dedicated to designing and manufacturing a variety of material handling solutions that meet all applicable CMAA, ANSI, OSHA, and MMA guidelines and standards. Our team of engineers and industry experts combine many years of experience in the material handling industry to manufacture material handling solutions that are backed by the best warranty in the industry.

Spanco production facilities are certified under the ISO 9001:2015 Quality Management System to provide superior quality products. And every welder at Spanco is certified to handle steel (D1.1) and aluminum (D1.2) in accordance with the rigorous requirements and lab testing established by the American Welders Society (AWS).

Spanco professionals welcome challenging projects that require custom crane engineering. Spanco also offers hundreds of pre-engineered lifting solutions, including Workstation Bridge Cranes, Jib Cranes, Gantry Cranes, Monorails, and Tractor Drives.



Morgantown, PA | Las Vegas, NV

Toll Free: (800) 869-2080 | Outside US: 1-610-286-7200 | [Spanco.com](http://Spanco.com) | [info@Spanco.com](mailto:info@Spanco.com)

